
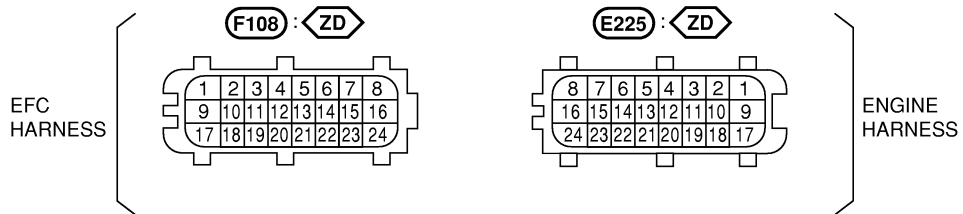


SUPER MULTIPLE JUNCTION (SMJ)


Terminal Arrangement

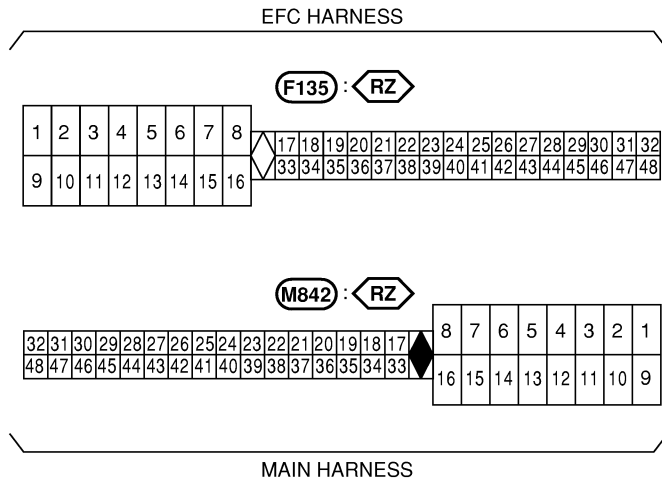

- RZ : ZD30DDTi engine for RHD models
- ZD : ZD30DDTi engine models


FUSE BLOCK — JUNCTION BOX (J/B)

Terminal Arrangement

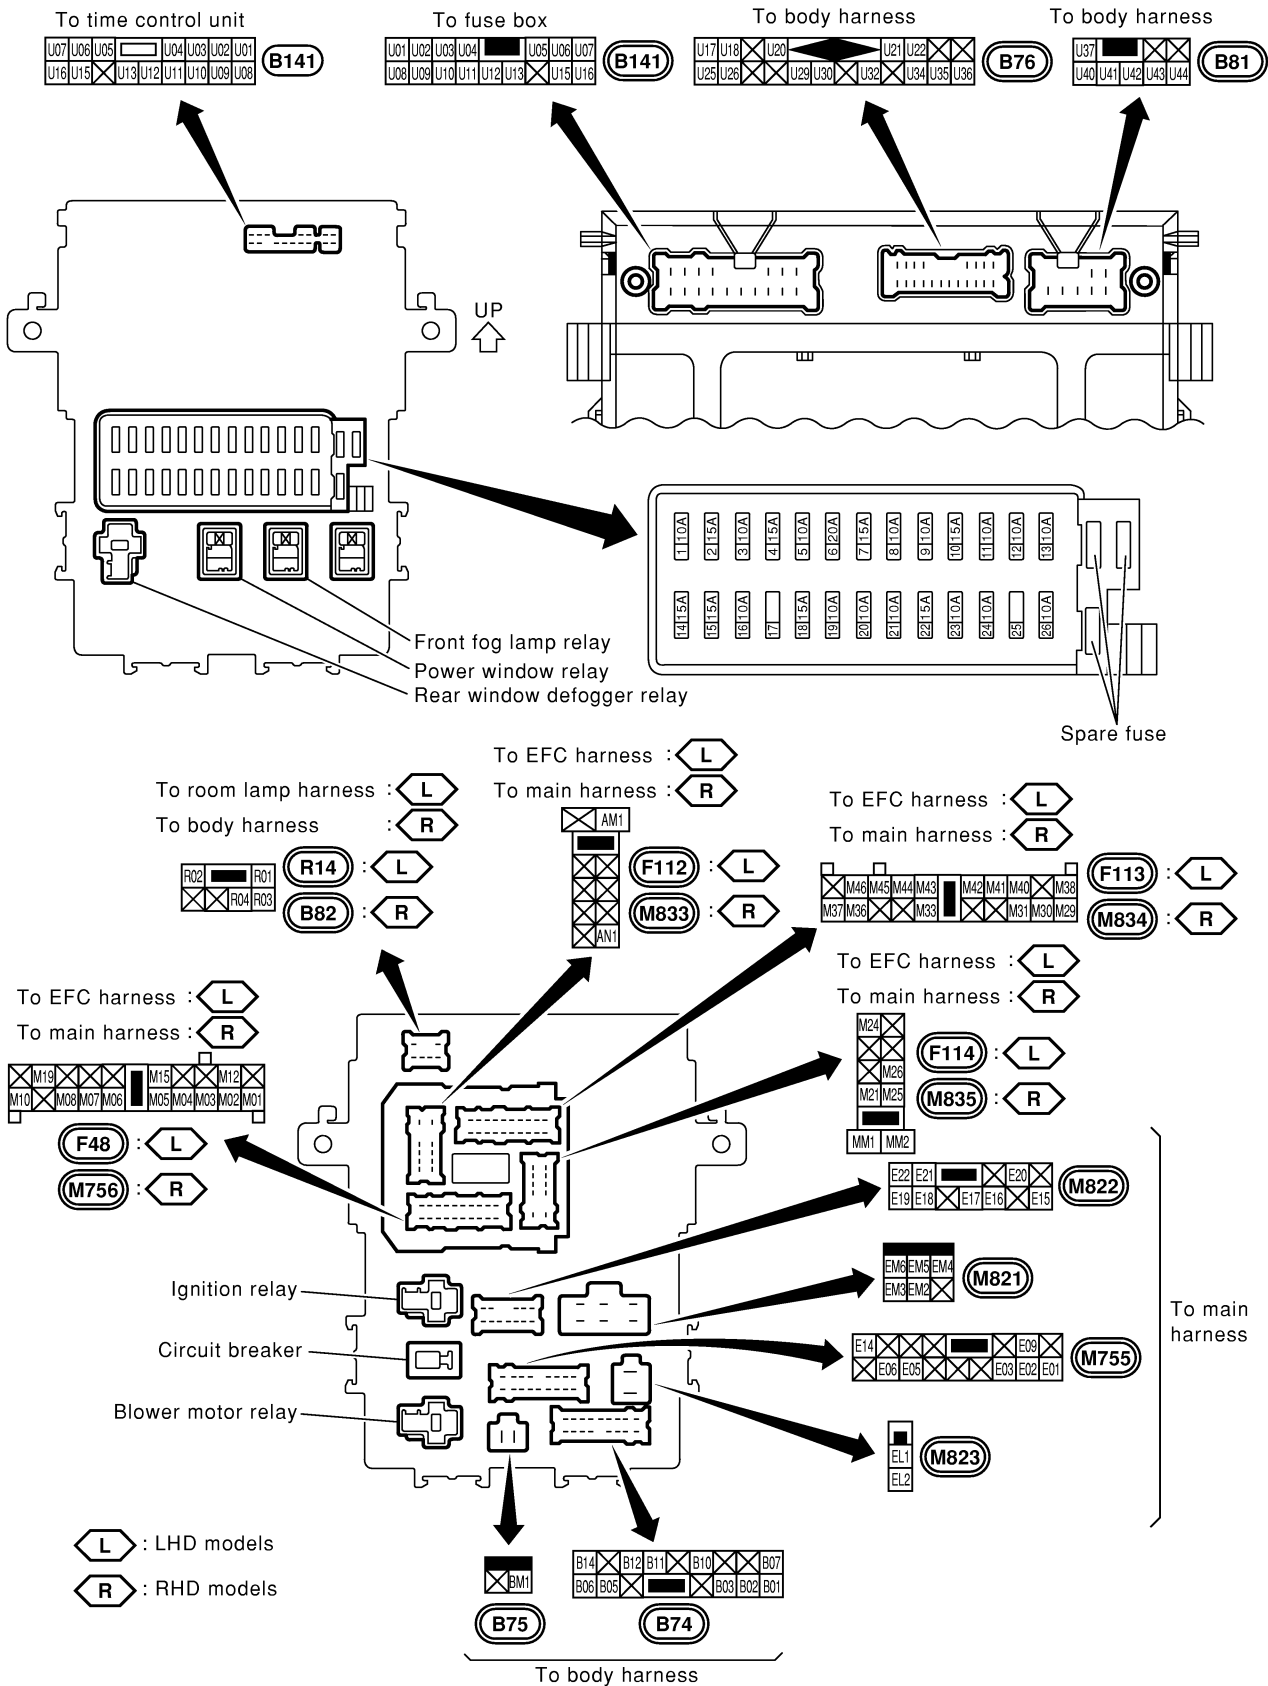

FUSE AND FUSIBLE LINK BOX

Terminal Arrangement

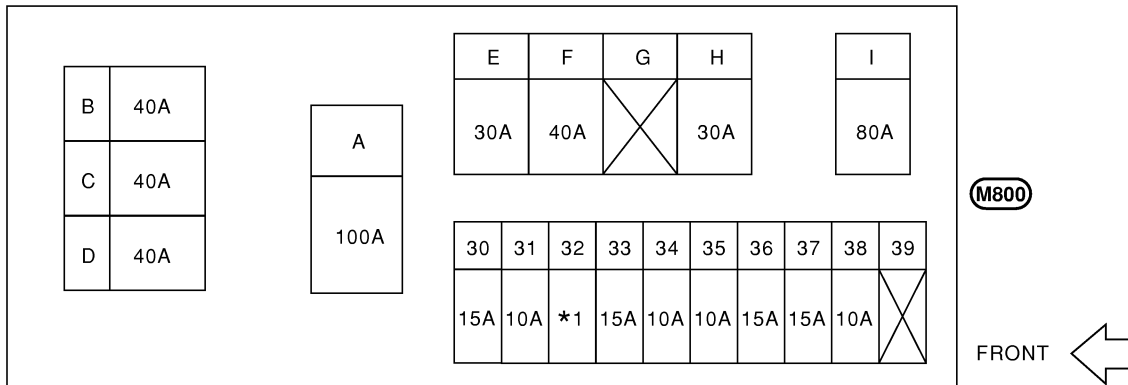


- *1 20A : TD27Ti engine models
- 10A : ZD30DDTi engine models


ELECTRICAL UNITS

Terminal Arrangement


ECM (TD27Ti engine)

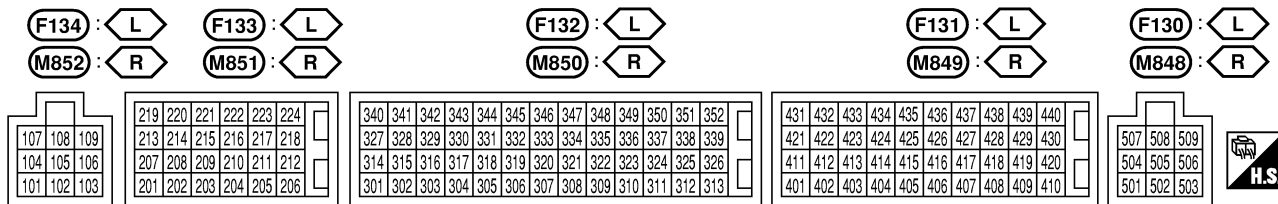


ECM (ZD30DDTi engine)

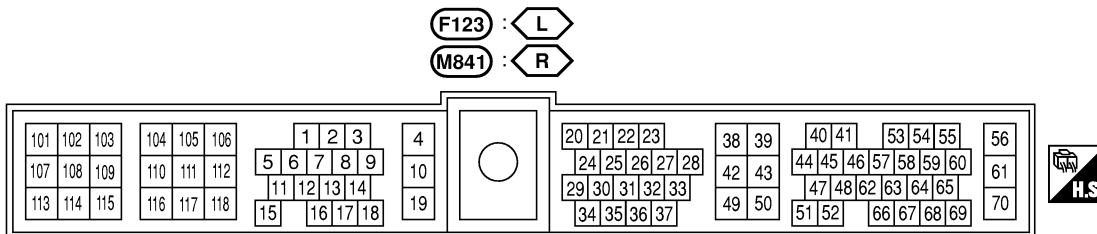


TCM (Transmission control module)

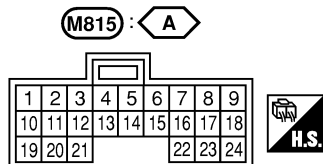

TCM (Transmission control module)

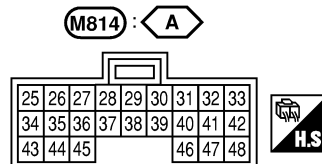

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

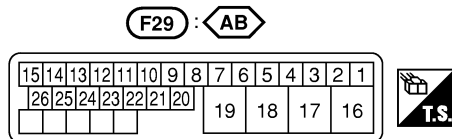

- L** : LHD models
- R** : RHD models
- A** : A/T models
- AB** : With ABS