

# ALPHABETICAL INDEX

## SECTION **IDX**

# ALPHABETICAL INDEX

## A

ABS (anti-lock brake system).....BR-35  
ABS - Wiring diagram .....BR-50  
A/C air flow.....HA-8  
A/C compressor precaution.....HA-5  
A/C control operation (manual A/C).....HA-6  
A/C relay.....HA-61  
A/C symptom chart (manual A/C) .....HA-36  
A/C trouble diagnoses (manual A/C) .....HA-27  
A/C, M - Wiring diagram .....HA-43  
ACC/SW - Wiring diagram .....EC-106  
Accelerator control system.....FE-2, 5  
Accelerator position sensor .....EC-130, 368, 371  
Accelerator position switch .....EC-369, 371  
Accelerator switch (F/C).....EC-104  
Accelerator wire adjustment .....FE-5  
Accelerator work unit.....EC-365  
A/C CUT - Wiring diagram .....EC-289  
Air bag .....RS-6  
Air bag disposal.....RS-20  
Air bag precautions .....GI-3  
Air bleeding (hydraulic clutch) .....CL-6  
Air bleeding for brake system .....BR-8  
Air cleaner filter replacement .....MA-5, 20, 24  
Air conditioner cut control .....EC-22, 311, 440  
Air control cable adjustment.....HA-62  
Air flow meter - See Mass air flow  
sensor.....EC-88, 356  
Alternator.....SC-27  
Angular tightening application.....EM-3  
Antenna .....EL-111, 127  
Anti-lock brake system - See ABS.....BR-37  
Anti-lock brake system - Wiring  
diagram.....BR-50  
APS - Wiring diagram .....EC-133  
ASCD vacuum hose .....MA-40  
A/T - Wiring diagram .....AT-7  
A/T - Wiring diagram - AT - PNP/SW .....AT-87  
A/T - Wiring diagram - AT - VSS A/T.....AT-49  
A/T control.....EC-155  
A/T diagnosis communication line .....EC-155  
A/T fluid checking.....AT-27  
A/T fluid temperature sensor.....AT-76  
A/T mode switch.....AT-94  
A/T self-diagnoses .....AT-14, 19  
A/T Wiring diagram - AT - ENG SS .....AT-79  
A/T Wiring diagram AT - BA/FTS.....AT-75  
A/T Wiring diagram AT - LPSV .....AT-82  
A/T Wiring diagram AT - OVRCSV .....AT-68  
A/T Wiring diagram AT - SSV/A.....AT-62  
A/T Wiring diagram AT - SSV/B.....AT-65  
A/T Wiring diagram AT - TCV .....AT-71  
A/T Wiring diagram AT - TPS.....AT-56  
A/T Wiring diagram AT - VSSMTR .....AT-52  
AT/C - Wiring diagram.....EC-157  
Audio.....EL-111, 113  
AUDIO - Wiring diagram .....EL-115

Audio and A/C control removal and  
installation - See Instrument panel .....BT-16  
Auto lock free running hub .....FA-14  
Automatic transmission number .....GI-30  
Axle housing (rear).....RA-8

## B

Back Door .....BT-14  
Back door opener - See Back door.....BT-14  
Back door trim.....BT-18  
Back door window.....BT-43  
Back-up lamp .....EL-49  
Back-up lamp switch (M/T) .....MT-6, 10  
BACK/L - Wiring diagram.....EL-49  
Ball joint front axle .....FA-36  
Basic inspection .....EC-50, 338  
Battery .....SC-3  
Battery Voltage .....EC-153  
Blower motor .....HA-60  
Blower resistor.....HA-60  
Body alignment .....BT-49  
BOOST - Wiring diagram .....EC-217  
Boring/horning cylinder block.....EM-74  
Brake booster.....BR-17  
Brake fluid change .....BR-5  
Brake fluid level.....MA-17, 36, 40, 43  
Brake fluid level and line check .....BR-5  
Brake hydraulic line.....BR-5, 6  
Brake inspection.....MA-36, 40, 41, 42  
Brake lines and cables inspection.....MA-36, 40, 42  
Brake lining wear temporary checking ....MA-36, 42  
Brake master cylinder .....BR-16  
Brake pedal .....BR-14  
Brake switch .....EC-400  
BRK/SW - Wiring diagram .....EC-205  
Bumper, front .....BT-6  
Bumper, rear .....BT-8

## C

Camshaft.....EM-30  
Camshaft position sensor (PUMP).....EC-161  
Center case (Transfer).....TF-9  
CHARGE - Wiring diagram .....SC-24  
Charge air pressure sensor .....EC-215  
Charging system .....SC-23  
Chassis and body maintenance .....MA-36  
CIGAR - Wiring diagram.....EL-105  
Cigarette lighter.....EL-104  
Circuit breaker.....EL-17  
CKPS - Wiring diagram.....EC-147  
Clock .....EL-104  
CLOCK - Wiring diagram.....EL-106  
Clutch cover.....CL-11, 12  
Clutch disc .....CL-11  
Clutch fluid level .....MA-17, 36  
Clutch master cylinder.....CL-7, 8

# ALPHABETICAL INDEX

Clutch pedal .....CL-3, 4, 5  
Clutch release mechanism .....CL-9  
Coil spring (rear) .....RA-14, 16  
Collision diagnosis.....RS-57  
Combination lamp, front, removal and  
installation .....BT-6  
Combination lamp, rear, removal and  
installation .....BT-8  
Combination meter (needle type) .....EL-70  
Combination meter removal and instal-  
lation - See Instrument panel.....BT-16  
Combination switch.....EL-23, 24  
Component Location (manual A/C).....HA-7  
Compression pressure.....EM-10  
Compressor clutch removal and  
installation.....HA-24  
Compressor mounting .....HA-21  
Connecting rod.....EM-73  
Connecting rod bearing clearance.....EM-77  
Connecting rod bushing clearance.....EM-73  
Console box - See Instrument panel.....BT-16  
CONSULT for ABS .....BR-58  
CONSULT for engine .....EC-39, 327  
CONSULT-II general information.....GI-26  
Control lever (M/T) .....MT-13  
Control lever (Transfer).....TF-8  
Control sleeve position sensor.....EC-414  
Control valve (A/T) .....AT-113  
COOL/F - Wiring diagram .....EC-112  
Coolant mixture ratio .....MA-17, 20, 22, 31  
Coolant replacement.....MA-5, 17, 20, 22, 31  
Cooling circuit (engine).....LC-9, 27  
Cooling fan .....LC-15, 33  
Cooling fan control .....EC-109  
Cooling fan relay .....EC-426  
Corrosion protection.....BT-5  
Counter gear (M/T).....MT-11  
Counter gear (Transfer).....TF-10, 20  
Cowl top .....BT-21  
Cowl top cover .....BT-21  
Crankcase emission control system -  
See positive crankcase ventilation.....EC-23, 312  
Crankcase ventilation system - See  
Positive crankcase ventilation .....EC-23, 312  
Crankshaft.....EM-76  
Crankshaft position sensor (TDC) .....EC-145, 385  
Cylinder block .....EM-66  
Cylinder head.....EM-52

## D

Data link connector .....EC-39, 327  
Daytime light system .....EL-29, 30, 31  
DEF - Wiring diagram .....EL-107  
Defroster door control rod adjustment .....HA-62  
Diagnosis sensor unit.....RS-11  
Diagnostic trouble code (DTC) for OBD  
system .....EC-33, 321  
Differential carrier assembly .....PD-29, 53

Differential carrier disassembly.....PD-18, 38, 40  
Differential gear oil replacement .....MA-36, 38, 39  
Dimensions.....GI-31  
D/LOCK - Wiring diagram.....EL-140  
Door glass.....BT-10  
Door lock.....BT-10  
Door mirror.....BT-48  
Door trim .....BT-19  
Door, front .....BT-10  
Door, rear .....BT-12  
Drive belt inspection .....MA-20, 28  
Drive chain (Transfer) .....TF-10  
Drive pinion diff. inspection.....PD-20, 42  
Drive pinion height .....PD-21, 49  
Drive plate runout .....EM-94  
Drive shaft.....MA-5  
Drive shaft (front).....FA-4, 12, 22  
Driver air bag.....RS-14  
Dropping resistor (A/T).....AT-86  
Dual pressure switch.....HA-9, 61

## E

ECM input/output signal.....EC-69, 346  
ECM relay .....EC-80, 209, 353  
ECMRLY - Wiring diagram .....EC-210  
ECTS - Wiring diagram .....EC-96  
EGR control (EGRC) - solenoid valve .....EC-431  
EGR control valve .....EC-439  
EGR volume control valve .....EC-222  
EGVC/V - Wiring diagram .....EC-225  
Electrical unit .....Foldout  
Electronic fuel injection pump .....EC-318  
Engine compartment.....BT-50  
Engine control circuit diagram .....EC-16, 302  
Engine control component parts  
location .....EC-12, 300  
Engine control module (ECM) .....EC-69, 121, 200,  
202, 213, 346,  
407, 444  
Engine control system diagram and  
chart.....EC-17, 303  
Engine coolant temperature sensor  
(ECTS).....EC-95, 361  
Engine oil filter replacement.....MA-5, 20, 21, 30  
Engine oil precautions .....GI-6  
Engine oil replacement.....MA-20, 21, 29  
Engine removal .....EM-63  
Engine room - See Engine  
compartment .....BT-50  
Engine serial number .....GI-30  
Exhaust manifold .....EM-18  
Exhaust system .....FE-4, 10  
Exhaust system inspection .....MA-36  
Extension tube diff. ....PD-19, 28  
Exterior.....BT-21  
Exterior lamp.....EL-45, 60

# ALPHABETICAL INDEX

## F

Fan switch .....HA-60  
F/FOG - Wiring diagram .....EL-51  
Final drive disassembly.....PD-15, 37  
Final drive pre-inspection.....PD-15, 37  
Final drive removal and installation .....PD-15  
Finisher, interior - See Trim .....BT-18  
Finisher, rear panel.....BT-18  
Floor trim.....BT-18  
Fluid temperature sensor (A/T).....AT-141  
Fluids.....MA-5, 17, 20, 36  
Flywheel (clutch).....CL-11, 12  
Flywheel runout.....EM-94  
Fog lamp, front .....EL-51, 53  
Fog lamp, rear .....EL-54  
Fork rod (M/T) .....MT-13  
Forward clutch.....AT-157  
Front axle.....FA-4, 13  
Front bumper .....BT-6  
Front case (Transfer).....TF-9, 23  
Front combination lamp removal and  
installation .....BT-6  
Front disc brake .....BR-26  
Front door .....BT-10  
Front Door Trim.....BT-19  
Front drive shaft (Transfer).....TF-9, 19  
Front final drive disassembly (4WD).....PD-14  
Front final drive removal and installa-  
tion (4WD) .....PD-12, 13  
Front fog lamp .....EL-51, 53  
Front passenger air bag.....RS-17  
Front seat.....BT-34  
Front seat belt .....RS-4  
Front seat belt pre-tensioner.....RS-12  
Front side air bag.....RS-18  
Front suspension .....FA-4, 29  
Fuel cut control (at no load & high  
engine speed).....EC-22, 311  
Fuel cut solenoid valve .....EC-376  
Fuel cut system .....EC-232  
Fuel filler lid.....BT-8  
Fuel filter replacement.....MA-5, 20, 23, 33  
Fuel gauge.....FE-3, 6, EL-72, 80  
Fuel injection system .....EC-20, 306  
Fuel injection timing feed back (Elec-  
tronic Fuel Injection Pump) .....EC-192  
Fuel precautions .....GI-6  
Fuel pump and gauge .....FE-3, 6, 7  
Fuel system .....FE-3, 6  
Fuel tank.....FE-3, 6  
Fuel temperature sensor.....EC-123, 372  
Fuse .....EL-17  
Fuse and fusible link box .....Foldout  
Fuse block .....Foldout  
Fusible link .....EL-17

## G

Garage jack and safety stand .....GI-32  
Gauges .....EL-70, 71  
Gear components (M/T) .....MT-11, 14, 16, 21, 23  
Generator - See Alternator.....SC-27  
GLOW - Wiring diagram.....EC-241  
Glow control system.....EC-239, 311, 389  
Glow plug .....EC-239, 390  
Glow relay .....EC-241, 396  
Grease.....MA-17, 39, 40, 44  
Ground distribution.....EL-18

## H

Harness connector.....EL-3  
Harness connector inspection.....GI-19  
Harness layout .....EL-247, 248, 264, 276, 278,  
286, 287, 288, 289, 290  
Hazard warning lamp.....EL-55, 56  
Headlamp .....EL-26, 29, 30, 31, 37, 38, 39, 42, 43  
Headlamp aiming control .....EL-37, 38, 39, 42  
Headlamp washer .....EL-100  
Headlining - See Roof trim .....BT-20  
Heat up switch.....EC-258  
Heated seat.....BT-36, EL-128  
HEATER - Wiring diagram .....HA-41  
HEATUP - Wiring diagram .....EC-259  
Height (Dimensions).....GI-10  
HFC134a (R134a) system precaution .....HA-3  
HFC134a (R134a) system service  
procedure.....HA-15  
HFC134a (R134a) system service tools .....HA-11  
High clutch .....AT-155  
H/LAMP - Wiring diagram .....EL-26, 31, 39, 56  
Hood.....BT-6  
Hood lock system .....BT-6  
Horn .....EL-104  
HORN - Wiring diagram.....EL-104  
How to erase DTC for OBD system .....EC-33, 321  
HSEAT - Wiring diagram.....EL-128

## I

Identification .....HA-2  
Identification plate .....GI-29, 30  
Idle speed.....EC-50, 338  
Idle speed inspection.....MA-20, 26  
ILL - Wiring diagram .....EL-62  
Illumination.....EL-61, 62  
Injection nozzle .....EC-24, 313  
Injection nozzle inspection .....MA-5, 20, 25  
Injection timing control valve.....EC-380  
INJPMP - Wiring diagram...EC-126, 164, 171, 178,  
185, 195, 235  
Instrument panel .....BT-16  
INT/L - Wiring diagram.....EL-66

# ALPHABETICAL INDEX

INT/V - Wiring diagram .....EC-274  
Intake air control valve control solenoid  
  valve .....EC-273  
Intake Air Volume .....EC-143  
Intake door control linkage adjustment .....HA-63  
Intake manifold .....EM-12  
Interior .....BT-18  
Interior lamp .....EL-61, 66  
ISO 15031-2 Terminology .....GI-35

## K

Knuckle spindle .....FA-20

## L

License lamp .....EL-45  
Limited slip diff. adjustment .....PD-45  
Limited slip diff. assembly .....PD-47  
Limited slip diff. disassembly .....PD-43, 44  
Limited slip diff. inspection .....PD-44  
Line pressure solenoid valve .....AT-84  
Line pressure test (A/T) .....AT-30, 196  
Liquid gasket application .....EM-3  
Location of electrical units .....EL-241, 242, 244  
Lock, door .....BT-10, 12, 14  
Low and reverse brake .....AT-161  
LSV (Load sensing valve) .....BR-10  
Lubricants .....MA-17  
Lubrication circuit (engine) .....LC-3, 20  
Lubrication oil A/C .....HA-22, 64  
Lubrication-locks, hinges and hood  
  latches .....MA-36, 45  
Luggage compartment trim .....BT-18

## M

MAFS - Wiring diagram .....EC-90  
MAIN - Wiring diagram .....EC-80  
Main drive gear (M/T) .....MT-11  
Main gear (Transfer) .....TF-10, 21  
Mainshaft (M/T) .....MT-11  
Mainshaft (Transfer) .....TF-10, 17  
Maintenance .....MA-5, 8, 11, 14, 20, 36, 48, 49  
MAJOR OVERHALL .....AT-119  
Major overhaul (Transfer) .....TF-9  
Malfunction indicator (MI) .....EC-34, 322  
Manifold tightening torque (intake &  
  exhaust) .....MA-20, 28  
Manual transmission number .....GI-30  
Manual transmission oil replacement .....MA-36, 37  
Map lamp .....EL-66  
Mass air flow sensor (MAFS) .....EC-88, 356  
Master cylinder (brake) .....BR-16  
Meter .....EL-70, 71  
METER - Wiring diagram .....EL-72  
MIL/DL - Wiring diagram .....EC-291

MIRROR - Wiring diagram .....EL-131  
Mirror, door .....BT-48  
Model variation .....GI-28  
Molding - See Exterior .....BT-21  
M/T major overhaul .....MT-10  
M/T removal and installation .....MT-7, 8  
Mud guard - See Exterior .....BT-21  
MULTI - Wiring diagram .....EL-169  
Multi-remote control system .....EL-168, 177, 179  
Multiport fuel injection precautions .....GI-5

## N

NATS (Nissan anti-theft  
  system) .....EL-186, 187, 188, 195, 208  
NATS - Wiring diagram .....EL-189  
NATS V2.0 precautions (For Europe) .....GI-4  
Needle lift sensor .....EC-427  
NVH troubleshooting (EM) .....EM-8

## O

Oil change (capacity) .....MA-21, 29, 37, 38, 39  
Oil change (interval) .....MA-5, 35  
Oil cooler (engine) .....LC-8  
Oil pan (engine) .....EM-22  
Oil pump (A/T) .....AT-134  
Oil seal replacement (engine) .....EM-50  
Oil seal replacement (front final drive  
  4WD) .....PD-10  
OILPSW - Wiring diagram .....EC-451  
On board diagnostic system .....EC-33, 321  
Overdrive control switch .....AT-95  
Overheat .....EC-109  
Overrun clutch solenoid valve .....AT-69, 70  
Oversize piston .....EM-74

## P

Park/Neutral position switch .....EC-251  
Park/neutral position switch (A/T) .....AT-88, 114  
Parking drum brake .....BR-35  
Parking lamp .....EL-45  
PCV (positive crankcase ventilation) .....EC-23, 312  
Periodic maintenance .....MA-5  
Piston pin inspection .....EM-71  
Piston ring inspection .....EM-72  
PNP/SW - Wiring diagram .....EC-252  
POWER - Wiring diagram .....EL-8  
Power door lock ...EL-137, 138, 145, 146, 148, 158  
Power steering fluid level .....MA-36, 44, ST-4  
Power steering gear .....ST-12, 22  
Power steering hydraulic pressure .....ST-7  
Power steering oil pump .....ST-16, 22  
Power steering system bleeding .....ST-5  
Power supply routing .....EL-6, 8  
Power window .....EL-133

# ALPHABETICAL INDEX

Pre-delivery inspection.....	MA-3
Priming pump.....	EC-50
Propeller shaft.....	PD-5, 57
Propeller shaft greasing.....	MA-36, 38
Propeller shaft inspection.....	MA-36, 38
Propeller shaft on vehicle service.....	PD-6
Pump communication line (Electronic Fuel Injection Pump).....	EC-175
Pump control module (Electronic Fuel Injection Pump).....	EC-189

## R

Radiator.....	LC-14, 32
Rear axle.....	RA-4, 6, 12
Rear bumper.....	BT-8
Rear case (Transfer).....	TF-9, 24
Rear combination lamp removal and installation.....	BT-8
Rear door.....	BT-12
Rear door trim.....	BT-18, 19
Rear drum brake.....	BR-31
Rear fog lamp.....	EL-54
Rear side window.....	BT-21, 43
Rear suspension.....	RA-4, 12
Rear window defogger.....	EL-107, 109, 110
Refrigerant connection precaution.....	HA-4
Refrigerant general precaution.....	HA-3
Refrigerant lines.....	HA-17
Refrigeration cycle.....	HA-9
REMOTE - Wiring diagram.....	EL-122
Removal and installation (A/T).....	AT-116
Removal and installation (Transfer).....	TF-7
Reverse clutch.....	AT-151
Reverse idler shaft (M/T).....	MT-11
Reverse main gear (M/T).....	MT-11
Revolution sensor (A/T).....	AT-50, 114
R/FOG - Wiring diagram.....	EL-54
Ring gear diff. inspection.....	PD-20, 42
Rocker cover.....	EM-20
Roof trim.....	BT-20
Rotor disc (front).....	FA-18

## S

Screw jack.....	GI-32
Seal - See Exterior.....	BT-21
Seat belt inspection.....	MA-36, 45
Seat belt pre-tensioner.....	RS-2, 9
Seat belt pre-tensioner disposal.....	RS-20
Seat belt, front.....	RS-4
Seat, front.....	BT-34
Seat, second (2nd).....	BT-37
Seat, third (3rd).....	BT-39
Second (2nd) seat.....	BT-37
Self-diagnostic results.....	EC-35, 324
Shift control (Transfer).....	TF-11, 24

Shift control components (M/T).....	MT-13, 14, 15, 21, 23, 31
Shift fork (M/T).....	MT-13
Shift schedule.....	AT-196
Shift solenoid valve A (A/T).....	AT-63
Shift solenoid valve B (A/T).....	AT-66
Shock absorber (front).....	FA-30
Shock absorber (rear).....	RA-14, 16
Side air bag.....	RS-18
Side air bag (satellite) sensor.....	RS-13
Side bearing preload diff.....	PD-24
Side trim.....	BT-18, 21
Side window - See Rear side window.....	BT-21
S/LOCK - Wiring diagram.....	EL-150
SMJ (super multiple junction).....	Foldout
Speedometer.....	EL-72
Spill valve.....	EC-182
Spiral cable.....	RS-14
SROOF - Wiring diagram.....	EL-130
SRS - See Supplemental Restraint System.....	RS-6
SRS - Wiring diagram.....	RS-32
SRS Trouble diagnoses.....	RS-26
S/SIG - Wiring diagram.....	EC-248
Stabilizer bar (front).....	FA-4, 33
Stabilizer bar (rear).....	RA-15, 16
Stall test (A/T).....	AT-27, 196
Standardized relay.....	EL-4
START - Wiring diagram.....	SC-14
Start signal.....	EC-248
Starter.....	SC-17
Starting system.....	SC-13
Steering gear and linkage inspection.....	MA-36, 43
Steering gear oil level.....	MA-36, 44
Steering gear, linkage and transfer gear inspection.....	MA-36, 43, 44
Steering linkage.....	ST-17, 22
Steering switch.....	EL-25
Steering wheel and column.....	ST-8, 22
Steering wheel play.....	ST-4
Steering wheel turning force.....	ST-6
Stop lamp.....	EL-48
Stop lamp switch.....	EC-204, 403
STOP/L - Wiring diagram.....	EL-48
Striking rod (M/T).....	MT-13
Sub-gear (M/T).....	MT-11
Sun roof, electric.....	EL-130
Sunroof.....	BT-40
Super lock.....	EL-145, 146, 148, 158
Supplemental Restraint System.....	RS-6
Swirl control valve control solenoid valve.....	EC-263
SWL/V - Wiring diagram.....	EC-265
Symptom matrix chart.....	EC-56, 340

## T

Tachometer.....	EL-72
Tail lamp.....	EL-45

# ALPHABETICAL INDEX

TAIL/L - Wiring diagram .....EL-45  
TCM circuit diagram .....AT-7  
TCM inspection table .....AT-46  
TDC Pulse Signal .....EC-168  
Temperature control cable and linkage  
adjustment .....HA-63  
THEFT - Wiring diagram .....EL-214  
Theft warning system .....EL-209, 210, 213, 230  
Thermo control amp .....HA-51, 61  
Thermostat .....LC-12, 31  
Third (3rd) seat .....BT-39  
THLCNT - Wiring diagram .....EC-435  
Three way catalyst precautions .....GI-5  
Throttle control solenoid valve .....EC-435  
Throttle position switch .....AT-60  
Tie-rod .....ST-19, 21  
Tie-rod ball joints .....ST-20  
Tightening torque of standard bolts .....GI-38  
Time control system .....EL-180, 182, 184  
Timing chain .....EM-26  
Timing gear .....EM-38  
Tire rotation .....MA-43  
Tooth contact diff. ....PD-27, 52  
Torque convertor clutch solenoid valve ..AT-72, 141  
Torsion bar spring .....FA-4, 30  
Tow truck towing .....GI-33  
Towing point .....GI-34  
Transaxle fluid replacement .....MA-36, 37  
Transfer case .....TF-9, 12  
Transfer fluid replacement (Part time  
4WD model) .....MA-36, 37  
Transfer oil replacement .....MA-36, 38  
Transmission case (M/T) .....MT-10, 14  
TRANSMT - Wiring diagram .....EL-80  
Tread-FR&RR (Dimensions) .....GI-25  
Trim .....BT-18, 19, 20, 21  
Trunk room trim .....BT-47  
Turbocharger .....EM-14  
Turbocharger charge air cooler .....EM-11  
Turbocharger precautions .....GI-5  
TURN - Wiring diagram .....EL-56  
Turn signal lamp .....EL-55, 56

## U

Under body .....BT-53  
Upper link (front susp.) .....FA-33

## V

Vacuum hose (brake system) .....BR-19

Vacuum hose drawing (Engine  
control) .....EC-18, 304  
Vacuum pump .....EM-24, BR-23, 25  
Valve clearance .....EM-35  
Valve clearance adjustment .....MA-20, 28  
Valve guide .....EM-59  
Valve lifter .....EM-32  
Valve seat .....EM-60  
Valve spring .....EM-61  
Variable nozzle turbocharger control  
solenoid valve .....EC-281  
Vehicle identification number .....GI-29  
Vehicle speed sensor (VSS) .....EC-99, 397  
Ventilator door control rod adjustment .....HA-61  
Viscosity number (SAE) .....MA-17, 18  
VNT - Wiring diagram .....EC-283  
VSS - Wiring diagram .....EC-101

## W

WARN - Wiring diagram .....EL-82, 93  
Warning chime .....EL-81, 93  
Warning lamps .....EL-81, 82  
Washer, front .....EL-94  
Washer, rear .....EL-96  
Water cock control rod adjustment .....HA-63  
Water pump .....LC-11, 29  
Water temperature gauge .....EL-72  
Weatherstrip - See Exterior .....BT-21  
Wheel alignment (front) .....FA-8  
Wheel balance .....MA-43  
Wheel bearing (front axle) .....FA-6  
Wheel bearing (rear) .....RA-5, 16  
Wheel hub (front) .....FA-4, 18  
Wheel sensors (ABS) .....BR-38, 42  
Wheel size .....GI-31  
WINDOW - Wiring diagram .....EL-134  
Window, back door .....BT-47  
Window, door .....BT-42  
Window, rear side .....BT-42, 43  
Window, side - See Rear side window .....BT-43  
Windshield .....BT-42  
WIP/R - Wiring diagram .....EL-96  
WIPER - Wiring diagram .....EL-94, 100  
Wiper and washer .....EL-94, 98  
Wiper, front .....EL-94  
Wiper, rear .....EL-96  
Wiring Diagram (Cell code) list .....EL-291

## NOTES